# Fasteners

# BB-3 Back-to-Back Mounting Plate

Mounts two bars back-to-back on partitions from  $^3/4"$  to 1  $^1/2"$ . Order one for two flanges.





Shown with D-3

BP-2 Partition Back Plate

Accommodates panel thicknesses from  $^3/4"$  to  $1^1/2"$ . Order one per flange.





Shown with CS-1

#### BP-10A Anchor Plate without Hole Pattern

Weld plate to building studs or fasten with bolts and nuts. Drill and tap holes in plate through finish wall. Fasten product to metal plate with machine screws provided.



Shown with 875-C



#### OH2, PH2 Screw Mounting Kits

2" #10 Stainless Steel Sheet Metal Screws. Three screws per kit; order one kit per flange.

**PH2** - Pan Head for 14 gauge flanges: R-1, CS-1, CS-15, FS-1, D-1

**OH2** - Oval Head for 8 gauge flanges: R-3, CS-3, CS-35, D-3



#### OHMSOW One-Way Machine Screw Kits

Oval head for use with in-wall backplates. Tamper-resistant. Three screws per kit; order one kit per flange.

**OHMSOW2** - 2" x #10 **OHMSOW1/2** - 1/2" x #10



### OH2-EX2, PH2-EX2 Screw & Expandet Anchor Kits

2" Sheet Metal Screws with plastic expandet anchor. Each kit has three screws and three expandet anchors. Order one kit per flange.

**PH2-EX2** - Pan Head for 14 gauge flanges: R-1, CS-1, CS-15, FS-1, D-1

**OH2-EX2** - Oval Head for 8 gauge flanges: R-3, CS-3, CS-35, D-3



Shown with 801

#### OHOW One-Way Sheet Metal Screw Kits

Oval head for use with 8 gauge flanges. Tamper-resistant. Three screws per kit; order one kit per flange.

**OHOW2** - 2" x #10 **OHOW3/4** - <sup>3</sup>/<sub>4</sub>" x #10



# SP-4 Sub Plate

In addition to their use with through bolts, SP-4's can be used to install center supports with triangular hole formations when access is tight and to bolt to a stud so that all three screw holes are engaged. Order one per flange.


**SP-4X** - For exposed screw flanges: R-1, R-3, D-1, D-3

**SP-4C** - For concealed screw flanges: CS-1, CS-15, CS-3, CS-35, FS-1



# BP-10B Anchor Plate with Hole Pattern

Specify flange model so the threaded sleeves match mounting holes. Attach product to BP-10B and fasten plate to building studs, allowing for recommended mounting heights. Remove product. Insert marker screws (not provided by TSM) through wood spacers into plate. Press drywall in place against the marker screws and drill through indentations. When drywall is installed, marker screws will project through wall. Remove and discard them, then fasten product to BP-10B with machine screws provided.

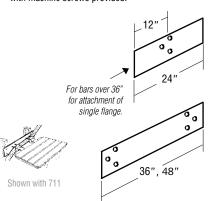

# OH3-TOG, PH3-TOG Toggle Bolt Kits

<sup>3</sup>/16" dia. x 3" length stainless steel toggle bolt (wings not stainless). Each kit has three bolts and three wings. Order one kit per flange.

**PH3-TOG** - Pan Head for 14 gauge flanges: R-1, CS-1, CS-15, FS-1, D-1

**OH3-TOG** - Oval Head for 8 gauge flange R-3, CS-3, CS-35, D-3





Shown with 5230

#### TB-6, TB-8 Through Bolt

Rod inserts through partition and into an SP-4 sub-plate (order separately). Requires only one hole drilled through a partition. Order one per flange.

**TB-6** - 1<sup>1</sup>/<sub>2</sub>" Rod **TB-8** - 8" Rod





TB-6 with SP-4C