

Tubular Specialties Manufacturing, Inc.


13011 South Spring Street, Los Angeles, CA 90061-1685 Phone 800/Grab Bar (800/472-2227) or 310/515-4801 www.GrabBar.com • Fax 310/217-0653



Surface Mounted Jumbo Roll Toilet Paper Dispenser

Technical Data

Revised Oct. 2008

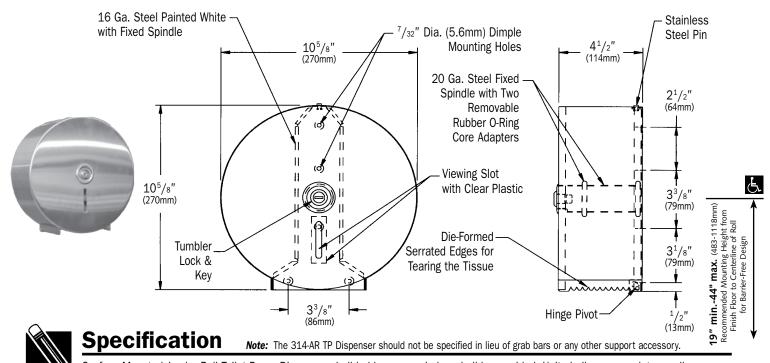

Surface Mounted Jumbo Roll Toilet Paper Dispenser shall hold one (1) roll up to 10" (254mm) diameter with $1^5/8$ " (41.3mm) diameter core or $2^1/4$ " (57mm) diameter core. Cover shall be fabricated of type 304 alloy 18-8 stainless steel, 20 gauge with a #4 satin finish. Rear of cabinet shall have five (5) mounting holes to suit #8 or #10 flat head screws. Cover shall be of one-piece construction hung on stainless steel pin hinges and shall be held closed by a tumbler lock keyed to other TSM washroom equipment with key provided. A viewing slot with clear plastic

window shall be provided. Unit shall accommodate smaller core size roll by removing the rubber core adapter "O" rings. Opening on bottom of cabinet shall have stainless steel teeth for toilet tissue tearing on both sides. Cover at top shall have shoulder pin to interlock back plate when closed.

Surface Mounted Jumbo Roll Toilet Paper Dispenser shall be Model 314-AR as manufactured by Tubular Specialties Manufacturing, 13011 South Spring Street, Los Angeles, California 90061, tel 800-Grab Bar.



Operation

One (1) 10" (254mm) 0.D. jumbo roll of toilet paper is mounted over $2^1/4^{"}$ (57mm) I.D. core adapter. One (1) $1^5/8^{"}$ (41.3mm) I.D. core roll may be used by removing the rubber core adapter

rings. Viewing slot continuously reveals tissue level. Key-locked cover prevents unauthorized access or removal. Roll is replaced on a cycle determined by maintenance needs.



Installation

- For general utility, surface mount unit within 12" (305mm) of front of toilet from centerline and 31" (787mm) above finished floor (AFF) from bottom of unit with five (5) screws (provided by others) through mounting holes provided.
- For compliance with ADA Accessibility Guidelines, install
 unit so that the leading edge of roll is no farther than 36"
 (914mm) from the back wall behind the commode and the
 centerline of roll is 19" (483mm) minimum to 44" (1118mm)
 maximum AFF.
- 3. It is the installer's responsibility to select fasteners that are appropriate for the wall or partition condition and application. It is important to evaluate wall or partition conditions because an accessory is only as strong as its anchoring devices and the mounting surface to which it is attached; for walls, adequate reinforcement or stud structure is required.
- 4. All accessories should be inspected periodically to make sure their attachment to the wall is not loosening.

