



Tubular Specialties Manufacturing, Inc.

13011 South Spring Street, Los Angeles, CA 90061-1685

Phone 800/Grab Bar (800/472-2227) or 310/515-4801

www.GrabBar.com • Fax 310/217-0653


314

Surface Mounted Jumbo Toilet Tissue Dispenser

Twin 9" Roll

Technical Data

Revised Oct. 2008

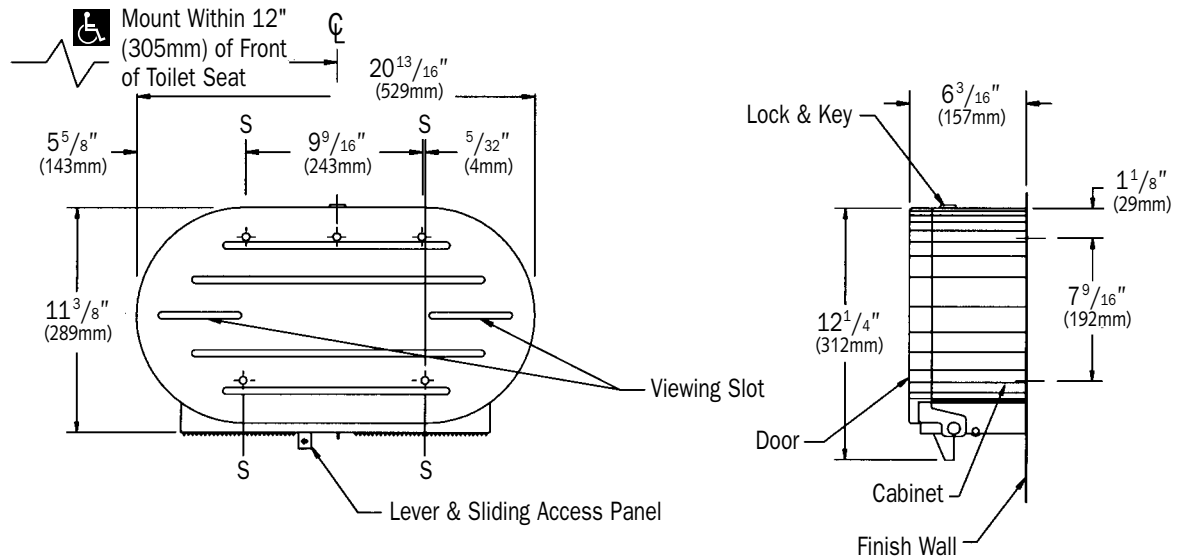

Specification

Note: The 314 TP Dispenser should not be specified in lieu of grab bars or any other support accessory.

Surface Mounted Jumbo Twin 9" Roll Toilet Tissue Dispenser shall hold two (2) 9" (229mm) dia. rolls of 3" (76mm) dia. or 2¹/₄" (57mm) dia. core tissue. Unit cabinet, door and mounting plate shall be fabricated of type 304 (18-8) satin finish 18 gauge stainless steel and shall be protected during shipment with PVC film easily removable after installation. Door shall be of drawn one-piece seamless construction with integral rigidizing ribs and shall be provided with two (2) tissue level viewing slots. Door shall be hung on heavy-duty stainless steel pivot hinges and shall be held closed by a tumbler lock keyed to

other TSM washroom equipment. Dispensing mechanism shall be fabricated of high-impact chemical- and flame-retardant ABS. Unit shall accommodate smaller core size rolls by removing the core adapters. When one roll is depleted, other roll shall be selected by shifting over panel lever at bottom of unit. Unit shall automatically reset to first roll during maintenance access.

Surface Mounted Jumbo Twin 9" Roll Toilet Tissue Dispenser shall be Model 310 as manufactured by Tubular Specialties Manufacturing, 13011 South Spring Street, Los Angeles, California 90061, tel 800-Grab Bar.



Operation

Two (2) 9" (229mm) O.D. jumbo rolls of toilet tissue are mounted over 3" (76mm) I.D. core adapters. Two (2) 2¹/₄" (57mm) I.D. core rolls may be used by removing the core adapters. Whenever one roll of toilet tissue is depleted, the

other roll is selected by shifting over the lever at the bottom of the unit. Viewing slots continuously reveal tissue level. Keylocked door prevents unauthorized access or removal. Tissue supply is replenished on a cycle determined by maintenance needs.



Installation

1. To comply with ADA Accessibility Guidelines, recommended mounting height for the centerline of farthest roll or leading edge of first roll (whichever is farthest) should be no farther than 36" (914mm) from back wall behind commode, and centerline of rolls should be 19" (483mm) minimum above finished floor (AFF) to 44" (1118mm) maximum AFF.
2. For general utility, surface mount unit within 12" (305mm) of front of toilet from centerline and 31" (787mm) AFF from bottom of unit. Mounting holes are marked with an "S".
3. It is the installer's responsibility to select fasteners that are

appropriate for the wall or partition condition and application. It is important to evaluate wall or partition conditions because an accessory is only as strong as its anchoring devices and the mounting surface to which it is attached; for walls, adequate wall reinforcement or stud structure is required.

4. All accessories should be inspected periodically to make sure their attachment to the wall is not loosening.



Guarantee

TSM 314 Surface Mounted Jumbo Toilet Tissue Dispenser is guaranteed against defects in workmanship and material for one year from shipping date.